

AIR SAMPLER INSTRUCTIONS



TEST YOUR HOME OR
OFFICE FOR MOULD
WITH A BIO-PUMP.

Please read the instructions before using the Air Sampler Pump

Initial Instructions:

For the most accurate test results, please close doors and windows prior to sampling (preferably 24hours before). Outside air may contain high levels of mold spores, and could affect your results if direct airflow from outside is let in.

USING THE BIO PUMP AND CARTRIDGES:




Step 1

Place the BIO-PUMP upright in the affected area, any height from 1.0m to 1.5m off the ground (e.g. on a table/bench)



Step 2

Take a cartridge from the box and write a location description (e.g. laundry) and order number of the cartridge.

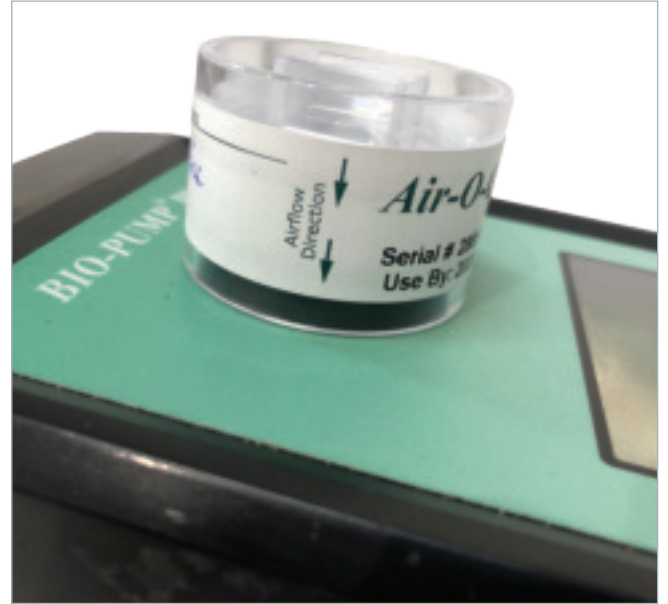

Step 3

Remove the seal from the top and bottom of the cassette (place aside as we will need the seals later) and place the bottom side of the cartridge into the top of the air sampler. You can test to see if the cartridge is inserted properly by turning the pump upside down in your hand, if the cartridge does not fall out, it is in properly.



Step 4

Turn on the air sampler by gently pressing the “on” button. The test will take 5 minutes to complete.



Step 5

Once completed, remove the cartridge, and place the seals back onto the cartridge and back into the box.

Step 6

Repeat process if you need to take more tests. Once all tests are completed, book your lab test and record the receipt on the *Chain of Custody Form* provided, place the air sampler and form back into the box (making sure you have placed all the cartridges back in as well), and mail the box back to the following address: IECL, 3/33 Miller St, Murarrie QLD 4172.