

AIR SAMPLER INSTRUCTIONS



TEST YOUR HOME OR
OFFICE FOR MOULD
WITH A BIO-PUMP.

Please read the instructions before using the Air Sampler Pump

Initial Instructions:

For the most accurate test results, please close doors and windows prior to sampling (preferably 24hours before). Outside air may contain high levels of mold spores, and could affect your results if direct airflow from outside is let in.

USING THE BIO PUMP AND Cassettes:




Step 1

Place the BIO-PUMP upright in the affected area, any height from 1.0m to 1.5m off the ground (e.g. on a table/bench)



Step 2

Take a cassette from the box and write a location description (e.g. laundry) and order number of the cassette.

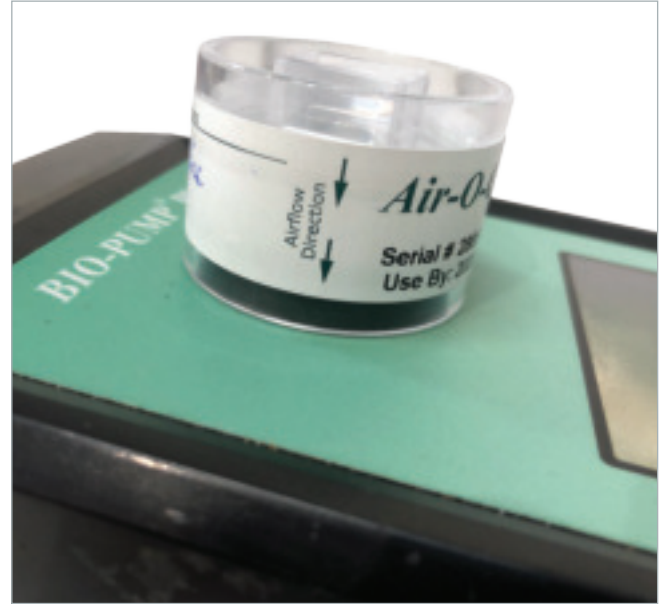

Step 3

Remove the seal from the top and bottom of the cassette (save to reseal later) and place the bottom side of the cassette into the top of the air sampler. You can test to see if the cassette is inserted properly by turning the pump upside down in your hand. If the cassette does not fall out, it is in properly.



Step 4

Turn on the air sampler by gently pressing the “on” button. The test will take 5 minutes to complete.



Step 5

Once completed, remove the cassette and place the seals back onto both ends. Place cassette back into the box.

Step 6

Repeat process if you need to take more tests. Once all tests are completed, book your lab test and record the receipt number on the *Chain of Custody Form* provided. Place the air sampler, cassettes and form back into the box. Mail or deliver the box back to the following address: IECL, 3/33 Miller St, Murarrie QLD 4172.